

# Tips for using Tattered Lace™ Dies with the eBosser

When using your Tattered Lace™ Magnetic Shim with the eBosser always make sure that the shim goes between the flat side of the die and the base plate - putting the shim on the cutting side of the die will result in you cutting through it. The Tattered Lace™ magnetic shim works in the same way as the eBosser one.

## eBosser Sandwich with Magnetic Shim



A Plate  
Paper / Card  
Die - cutting side up  
Magnetic Shim  
C Plate  
B Plate  
D Plate


### Standard Die

Always place the die to the edge of the plates to get the highest pressure and cleanest cut from your machine.

### Border Die

For a border die place it lengthways on the plates to get a clean cut and to ease the pressure as the die goes through the machine.

### Assorted Dies

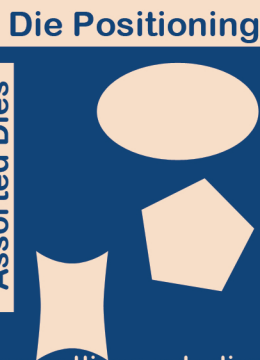

When cutting a selection of dies dot them around the plates rather than placing in a uniform way to ease the pressure.

## Cutting Tips

When placing more than one die on the plate make sure you don't have the edges of the dies touching or overlapping. As the shim is magnetic it will hold the die in position for you so with the eBosser you can get them quite close together.

Try not to overload the plates with dies as the eBosser is pressure sensitive and too much pressure across the width of the plates will result in the sandwich being rejected.

If you are using a large plate die it may need a few passes through your machine to complete the cut, especially in the centre. To do this run the sandwich through, remove the entire sandwich while holding the plates together and turn it so that the other end goes into the machine first. Repeat as above, you may need to do this a few times to complete the cut.

We hope you find this guide helpful,  
if you require any additional help  
please email [info@tatteredlace.co.uk](mailto:info@tatteredlace.co.uk)  
or call 01246 251212

*Tattered Lace*™ **DIES**

*Designed by Stephanie Weightman*  
[www.tatteredlace.co.uk](http://www.tatteredlace.co.uk)